


DEHUMIDIFIER

OWNER'S MANUAL

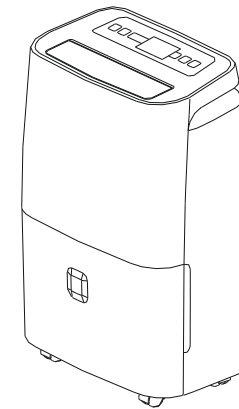

The design and specifications are subject to change without prior notice for product improvement. Consult with the sales agency or manufacturer for details. Any updates to the manual will be uploaded to the service website, please check for the latest version.

CD027IU-AY5000(EUDG3)(ZG)
16120100000286

Before operating this product, please read the instructions carefully and save this manual for future use.

SOCIABLE REMARK

When using this dehumidifier in the European countries, the following information must be followed:


DISPOSAL: Do not dispose this product as unsorted municipal waste. Collection of such waste separately for special treatment is necessary.

It is prohibited to dispose of this appliance in domestic household waste.

For disposal, there are several possibilities:

- A) The municipality has established collection systems, where electronic waste can be disposed of at least free of charge to the user.
- B) When buying a new product, the retailer will take back the old product at least free of charge.
- C) The manufacture will take back the old appliance for disposal at least free of charge to the user.
- D) As old products contain valuable resources, they can be sold to scrap metal dealers.

Wild disposal of waste in forests and landscapes endangers your health when hazardous substances leak into the ground-water and find their way into the food chain.

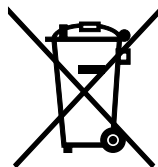

Note About Fluorinated Gasses

- Fluorinated greenhouse gases are contained in hermetically sealed equipment. For specific information on the type, the amount and the CO2 equivalent in tonnes of the fluorinated greenhouse gas (on some models), please refer to the relevant label on the unit itself.
- Installation, service, maintenance and repair of this unit must be performed by a certified technician.
- Product uninstillation and recycling must be performed by a certified technician.

CONTENTS

SAFETY PRECAUTIONS

Warning	2
Caution	2
Electrical information	3

CONTROL PADS ON THE DEHUMIDIFIER

Control pads.....	6
Other features.....	7

IDENTIFICATION OF PARTS

Identification of parts	8
Positioning the unit	9

OPERATING THE UNIT

When using the unit	9
Removing the collected water	10

CARE AND MAINTENANCE

Care and cleaning of the dehumidifier	11
---	----

TROUBLESHOOTING TIPS

Troubleshooting tips	12
----------------------------	----

Read This Manual

Inside you will find many helpful hints on how to use and maintain your air conditioner properly. Just a little preventive care on your part can save you a great deal of time and money over the life of your air conditioner. You'll find many answers to common problems in the chart of troubleshooting tips. If you review our chart of Troubleshooting Tips first, you may not need to call for service at all.

CAUTION



- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision. (be applicable for the European Countries)
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. (be applicable for other countries except the European Countries)

- Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- The appliance shall be installed in accordance with national wiring regulations.
- The appliance with electric heater shall have at least 1 meter space to the combustible materials.
- Contact the authorised service technician for repair or maintenance of this unit.



SAFETY PRECAUTIONS

To prevent injury to the user or other people and property damage, the following instructions must be followed. Incorrect operation due to ignoring of instructions may cause harm or damage.




- The seriousness is classified by the following indications.

	WARNING This symbol indicates the possibility of death or serious injury.
	CAUTION This symbol indicates the possibility of injury or damage to property.

- Meanings of symbols used in this manual are as shown below.

	Never do this.
	Always do this.










WARNING

 Do not exceed the rating of the power outlet or connection device.	 Do not operate or stop the unit by switching on or off the power supply.	 Do not damage or use an unspecified power cord.
• Otherwise, it may cause electric shock or fire due to excess heat generation.	• It may cause electric shock or fire due to heat generation.	• It may cause electric shock or fire.




2

SAFETY PRECAUTIONS

WARNING

 Do not modify power cord length or share the outlet with other appliances.	 Do not insert or pull out plug with wet hands.	 Do not place the unit near a heat source.
• It may cause electric shock or fire due to heat generation.	• It may cause electric shock.	• Plastic parts may melt and cause a fire.
 Disconnect the power if strange sounds, smell, or smoke comes from it.	 You should never try to take apart or repair the unit by yourself.	 Before cleaning, turn off the power and unplug the unit.
• It may cause fire and electric shock.	• It may cause failure of machine or electric shock.	• It may cause electrical shock or injury.
 Do not use the machine near flammable gas or combustibles, such as gasoline, benzene, thinner, etc.	 Do not drink or use the water drained from the unit.	 Do not take the water bucket out during operation.
• It may cause an explosion or fire.	• It contains contaminants and could make you sick.	• It may cause bucket full protect of the unit and cause electric shock.

CAUTION

 Do not use the unit in small spaces.	 Do not put in places where water may splash onto the unit.	 Place the unit on a level, sturdy section of the floor.
• Lack of ventilation can cause overheating and fire.	• Water may enter the unit and degrade the insulation. It may cause an electric shock or fire.	• If the unit falls over, it may cause water to spill and damage belongings, or cause electrical shock or fire.

3

SAFETY PRECAUTIONS

⚠ CAUTION

Ⓞ Do not cover the intake or exhaust openings with cloths or towels.

- A lack of air flow can lead to overheating and fire.

Ⓞ Never insert your finger or other foreign objects into grills or openings. Take special care to warn children of these dangers.

- It may cause electric shock or failure of appliance.

Ⓞ Always insert the filters securely. Clean filter once every two weeks.

- Operation without filters may cause failure.

Ⓞ Care should be taken when using the unit in a room with the following persons:

- Infants, children, elderly people, and people not sensitive to humidity.

Ⓞ Do not place heavy object on the power cord and take care so that the cord is not compressed.

- There is danger of fire or electric shock.

Ⓞ If water enters the unit, turn the unit off and disconnect the power, contact a qualified service technician.

- It may cause failure of appliance or accident.

Ⓞ Do not use in areas where chemicals are handled.

- This will cause the unit deterioration due to chemicals and solvents dissolved in the air.

Ⓞ Do not climb up on or sit on the unit.

- You may be injured if you fall or if the unit falls over.

Ⓞ Do not place flower vases or other water container on top of the unit.

- Water may spill inside the unit, causing insulation failure and electrical shock or fire.

SAFETY PRECAUTIONS

Electrical Information

- The manufactures nameplate is located on the rear panel of the unit and contains electrical and other technical data specific to this unit.
- Be sure the unit is properly grounded. To minimize shock and fire hazards, proper grounding is important.
- The power cord is equipped with a three-prong grounding plug for protection against shock hazards. Your unit must be used in a properly grounded wall receptacle. If the wall receptacle you intend to use is not adequately grounded or protected by a time delay fuse or circuit breaker (please refer to the nameplate for the electrical data), have a qualified electrician install the proper receptacle.
- Ensure the receptacle is accessible after the unit installation.
- **Do not use extension cords or an adapter plugs with this unit.** However, if it is necessary to use an extension cord, use an approved "Dehumidifier" extension cord only (available at most local hardware stores).
- To avoid the possibility of personal injury, always disconnect the power supply to the unit, before installing and/or servicing.

CONTROL PADS ON THE DEHUMIDIFIER

NOTE: The control panel of the unit you purchased may be slightly different according to the models.

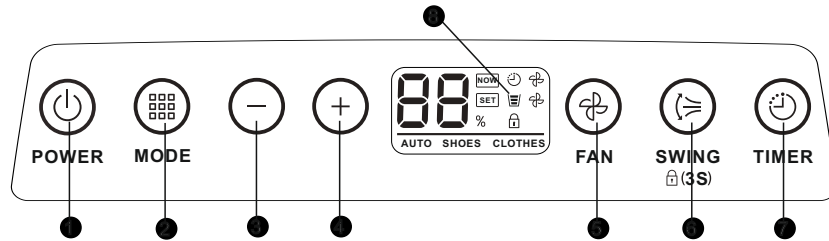


Fig.1

Control pads

When you push the button to change operation modes, the unit will make a beep sound to indicate that it is changing modes.

- **POWER Pad**
Press to turn the dehumidifier on and off.
 - **MODE Pad**
Press to select the desired operation mode from ATUO, SHOES and CLOTHES.
NOTE: SHOES mode is optional.
 - ● **⊖/⊕ : Down/Up Pads**
 - **Humidity Set Control Pads**
The humidity level can be set within a range of °CO (Relative Humidity) to 70%RH (Relative Humidity) in 5% increments.
For drier air, press the ⊖ pad and set to a lower percent value(%).
For damper air, press the ⊕ pad and set a higher percent value(%).
- NOTE: The humidity level can not be set in SHOES and CLOTHES modes.
- **FAN Pad**
Control the fan speed. Press to select either High or Low fan speed. Set the fan control to High for maximum moisture removal. When the humidity has been reduced and quiet operation is preferred, set the fan control to Low.
NOTE: The fan speed is High speed in SHOES and CLOTHES modes automatically.

- **SWING Pad**
Press to initiate the auto swing feature or lock the louver at the desired position. Press this pad for 3 seconds to initiate the lock/unlock feature. All other pads are unavailable under lock feature.
- **TIMER Pad**
Press to initiate the Auto stop feature. Press the Timer Pad to set the Auto stop time from 0.0 to 8 in 1 hour increments.
- **Display**
Shows the set % humidity level from °CO to 70% or auto stop time (0~8) while setting, then shows the actual (±5% accuracy) room % humidity level in a range of 30% RH (Relative Humidity) to 90%RH (Relative Humidity).
Error Codes :
E122- Tube temperature sensor error--Unplug the unit and plug it back in. If error repeats, call for service.
E142- Room temperature sensor and humidity sensor error-- Unplug the unit and plug it back in. If error repeats, call for service.
E163- Main control board fault parameters error-- Unplug the unit and plug it back in. If error repeats, call for service.
E554- Refrigerant leakage detection-- With this new technology, the display area will appear "E554" when the unit detects refrigerant leakage, call for service.

NOTE: Error Codes is displayed HIGH TWO codes (ex. E1) for 1 second, then displayed LOW TWO codes (ex. 22) for 1 second circularly.

Indicator lights Display:

- ROOM - actual humidity level indicator light.
- SET - setting humidity level indicator light.
- ⏸ - auto stop indicator light.
- 🪣 - full water indicator light.

6

CONTROL PADS ON THE DEHUMIDIFIER

- ⊖ - low fan speed indicator light.
- ⊕ - high fan speed indicator light.
- 🔒 - lock feature indicator light.

- AUTO - AUTO mode indicator light.
- SHOES - SHOES mode indicator light.
- CLOTHES - CLOTHES mode indicator light.

Other features

Full Water Light

Glow when the bucket is ready to be emptied, or when the bucket is removed or not replaced in the proper position.

Auto Shut Off

The dehumidifier shuts off when the bucket is full, or when the bucket is removed or not replaced in the proper position. When the setting humidity is reached, the unit will be shut off automatically. For some models, the fan motor will continue operating.

Auto Defrost

When frost builds up on the evaporator coils, the compressor will cycle off and the fan will continue to run until the frost disappears.

NOTE: When Auto defrosting operation, the unit may make a voice of refrigerant flowing, it is normal.

Wait 3 minutes before resuming operation

After the unit has stopped, it can not be restart operation in the first 3 minutes. This is to protect the unit. Operation will automatically start after 3 minutes.

Auto-Restart

 
If the unit breaks off unexpectedly due to the power cut, it will restart with the previous function setting automatically when the power resumes.

AUTO mode


The unit can be set desired humidity level, fan speed and louver swing feature.

SHOES mode


The unit can make the MAX dehumidification function when it is under the SHOES mode. The fan speed is fixed at high fan speed and the louver will stop swing. The unit will quit SHOES mode after a maximum 2 hours' operation.




Take down the SHOES dryer cover.

 

Install the SHOES dryer pipe to the unit.

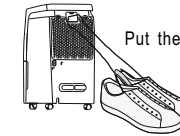


Put the SHOES dryer pipe to the shoes

 

After using, take down the SHOES dryer pipe.

CLOTHES mode

The unit can make the MAX dehumidification function when it is under the CLOTHES mode. The fan speed is fixed at high fan speed and the swing feature can be set.

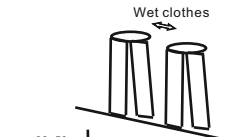

Allow 30~50cm of distance on the top and right side of the unit to the wet clothes.

Fig.A

NOTE:

- The Dryer mode must be operated in a close room, do not open the door and window.
- To make the best effective dehumidification, please first dehydrate the wet clothes.
- Make sure to direct airflow at the wet clothes (See Fig.A).
- For thick and heavy wet clothes may not get the best effective dehumidification.

⚠ CAUTION

- Do not cover the air outlet of the unit with clothes. It may cause excessive heat, fire or failure of unit.
- Do not place the wet clothes on the top of the unit and do not make the water drop into the unit. It may cause electric shock, creepage or failure of unit.

7

IDENTIFICATION OF PARTS

Identification of parts

Front

- ① Control panel
- ② Handle (both sides)
- ③ Air outlet grille
- ④ Water bucket

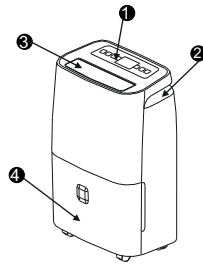


Fig.2

Rear

- ① Drain hose outlet
- ② Caster
- ③ Power Cord and plug
- ④ Power Cord buckle
- ⑤ Air intake grille
- ⑥ Air filter (behind the grill)
- ⑦ Shoes dryer cover
- ⑧ Shoes dryer pipe

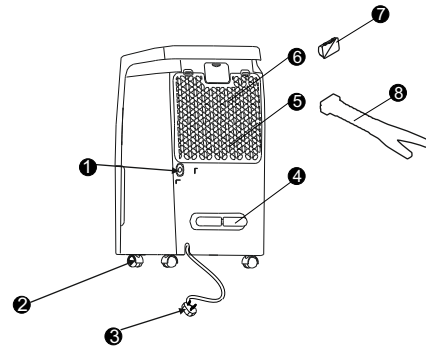


Fig.3

NOTE: All the pictures in the manual are for explanation purposes only. The actual shape of the unit you purchased may be slightly different, but the operations and functions are the same.

OPERATING THE UNIT

Positioning the unit

A dehumidifier operating in a basement will have little or no effect in drying an adjacent enclosed storage area, such as a closet, unless there is adequate circulation of air in and out of the area.

- Do not use outdoors.
- This dehumidifier is intended for indoor residential applications only. This dehumidifier should not be used for commercial or industrial applications.
- Place the dehumidifier on a smooth, level floor strong enough to support the unit with a full bucket of water.
- Allow at least 20cm of air space on all sides of the unit for good air circulation.
- Place the unit in an area where the temperature will not fall below 5°C(41°F). The coils can become covered with frost at temperatures below 5°C(41°F), which may reduce performance.
- Place the unit away from the clothes dryer, heater or radiator.
- Use the unit to prevent moisture damage anywhere books or valuables are stored.
- Use the dehumidifier in a basement to help prevent moisture damage.
- The dehumidifier must be operated in an enclosed area to be most effective.
- Close all doors, windows and other outside openings to the room.

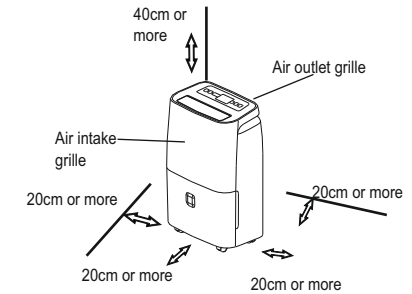


Fig.4a

Casters(Install at four points on the bottom of unit)

- Do not force casters to move over carpet, nor move the unit with water in the bucket. (The unit may tip over and spill water.)

NOTE:Casters is optional,some models without.

When using the unit

- When first using the dehumidifier, operate the unit continuously 24 hours.
- This unit is designed to operate with a working environment between 5°C/41°F and 35°C/95°F.
- If the unit has been switched off and needs to be switched on again quickly, allow approximately three minutes for the correct operation to resume.
- Do not connect the dehumidifier to a multiple socket outlet, which is also being used for other electrical appliances.
- Select a suitable location, making sure you have easy access to an electrical outlet.
- Plug the unit into a electrical socket-outlet with earth connection.
- Make sure the Water bucket is correctly fitted otherwise the unit will not operate properly.

NOTE:When the water in the bucket reaches to a certain level,please be careful to move the machine to avoid it falling down.

Removing the collected water

There are two ways to remove collected water.

1. Use the bucket

- When the unit is off, if the bucket is full, the unit will beep 8 times and the Full Water indicator light will flash.
- When the unit is on, if the bucket is full, the compressor turns off and the fan turns off after 30 seconds for drying the water of the condenser, then the unit will beep 8 times and the Full Water indicator light will flash.
- Slowly pull out the bucket. Grip the left and right handles securely, and carefully pull out straight so water does not spill. Do not put the tank on the floor because the bottom of the bucket is uneven. Otherwise the bucket will fall and cause the water to spill.
- Throw away the water and replace the bucket. The bucket must be in place and securely seated for the dehumidifier to operate.
- The machine will re-start when the bucket is restored in its correct position.

1. Pull out the bucket a little.



Fig.5

2. Hold both sides of the bucket with even strength, and pull it out from the unit.

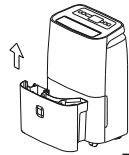


Fig.6

3. Pour the water out.

NOTES:


- When you remove the bucket, do not touch any parts inside of the unit. Doing so may damage the product.
- Be sure to push the bucket gently all the way into the unit. Banging the bucket against anything or failing to push it in securely may cause the unit not to operate.
- When you remove the bucket, if there is some water in the unit you must dry it.

2. Continuous draining

Water can be automatically emptied into a floor drain by attaching the unit with a water hose (not included).

- Remove the rubber plug from the back drain hose outlet. Attach a drain hose (ID=15mm) and lead it to the floor drain or a suitable drainage facility (see Fig.7).
- Make sure the hose is secure so there are no leaks.
- Direct the hose toward the drain, making sure that there are no kinks that will stop the water flowing.
- Place the end of the hose into the drain and make sure the end of the hose is level or down to let the water flow smoothly. Do never let it up.
- Select the desired humidity setting and fan speed on the unit for continuous draining to start.

NOTE: When the continuous drain feature is not being used, remove the drain hose from the outlet.

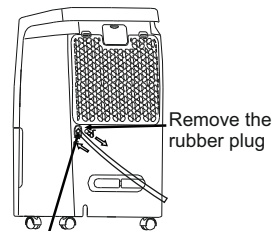

Remove the rubber plug

Attach the hose to the drain hose outlet.

Fig.7

Care and cleaning of the dehumidifier

Turn the dehumidifier off and remove the plug from the wall outlet before cleaning.

1. Clean the Grille and Case

- Use water and a mild detergent. Do not use bleach or abrasives.
- Do not splash water directly onto the main unit. Doing so may cause an electrical shock, cause the insulation to deteriorate, or cause the unit to rust.
- The air intake and outlet grilles get soiled easily, so use a vacuum attachment or brush to clean.

2. Clean the bucket

Every few weeks, clean the bucket to prevent growth of mold, mildew and bacteria. Partially fill the bucket with clean water and add a little mild detergent. Swish it around in the bucket, empty and rinse.

NOTE: Do not use a dishwasher to clean the bucket. After clean, the bucket must be in place and securely seated for the dehumidifier to operate.

3. Clean the air filter

The air filter behind the front grille should be checked and cleaned at least every 30 days or more often if necessary.

NOTE: DO NOT RINSE OR PUT THE FILTER IN AN AUTOMATIC DISHWASHER.

To remove:

- Grip the tab on the filter and pull it outward, then pull it up as shown in Fig.8.
- Clean the filter with warm, soapy water. Rinse and let the filter dry before replacing it. Do not clean the filter in a dishwasher.

To attach:

- Insert the air filter into the unit from underside to upside. See Fig.10.

CAUTION:

DO NOT operate the dehumidifier without a filter because dirt and lint will clog it and reduce performance.

4. When not using the unit for long time periods

- After turning off the unit, wait one day before emptying the bucket.
- Clean the main unit, water bucket and air filter.
- Cover the unit with a plastic bag.
- Store the unit upright in a dry, well-ventilated place.

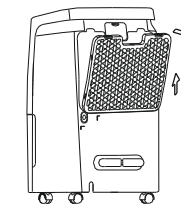


Fig. 8



Fig. 9

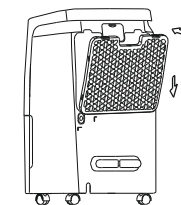


Fig. 10

TROUBLESHOOTING TIPS

Before calling for service, review the chart below first yourself.

Problem	What to check
Unit does not start	<ul style="list-style-type: none">● Make sure the dehumidifier's plug is pushed completely into the outlet.● Check the house fuse/circuit breaker box.● Dehumidifier has reached its preset level or bucket is full.● Water bucket is not in the proper position.
Dehumidifier does not dry the air as it should	<ul style="list-style-type: none">● Did not allow enough time to remove the moisture.● Make sure there are no curtains, blinds or furniture blocking the front or back of the dehumidifier.● The humidity control may not be set low enough.● Check that all doors, windows and other openings are securely closed.● Room temperature is too low, below 5°C(41°F).● There is a kerosene heater or something giving off water vapor in the room.
The unit makes a loud noise when operating	<ul style="list-style-type: none">● The air filter is clogged.● The unit is tilted instead of upright as it should be.● The floor surface is not level.
Frost appears on the coils	<ul style="list-style-type: none">● This is normal. The dehumidifier has Auto defrost feature.
Water on floor	<ul style="list-style-type: none">● Hose to connector or hose connection may be loose.● Intend to use the bucket to collect water, but the back drain plug is removed.
E122, E142, E163, E554 appear in the display	<ul style="list-style-type: none">● These are error codes. See the CONTROL PADS ON THE DEHUMIDIFIER section.